
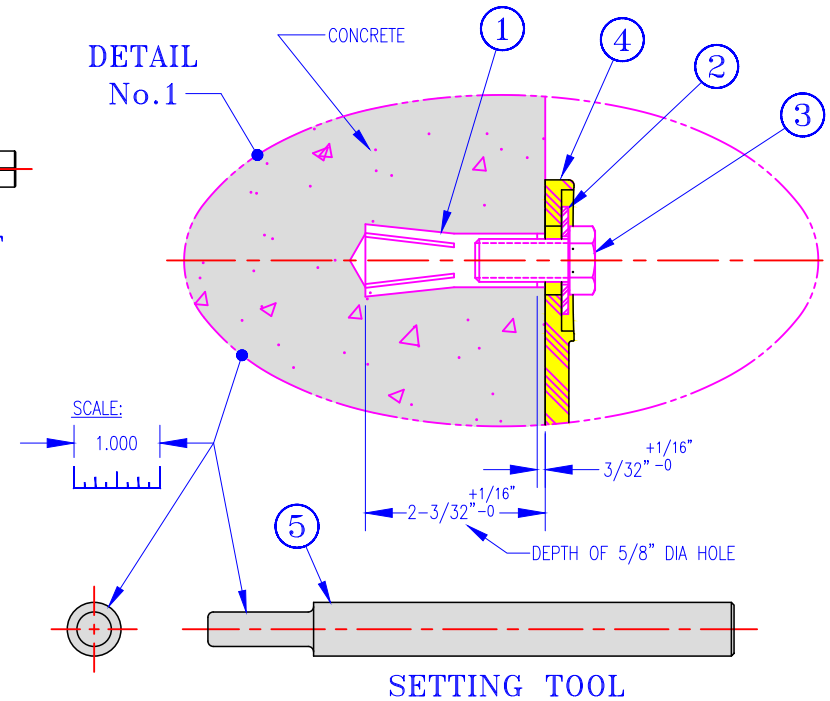
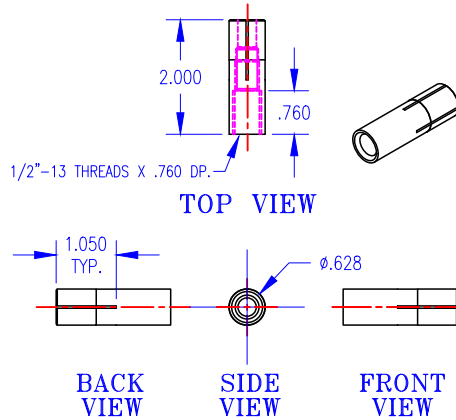


DROP-IN ANCHOR INSTALLATION

1/2"-13 X 2" DROP-IN ANCHOR PART DIMENSIONS SCALE: 2 TO 1

BILL OF MATERIAL			
ITEM NUMBER	CATALOG NUMBER	DESCRIPTION	QUANTITY REQUIRED
①	FSRM-12	1/2"-13 DROP-IN ANCHOR Material: 303 STAINLESS STEEL	2
②	FFW316-18-40	FLAT WASHER ID=.562, OD=1.250, THK=.078 Material: 316 STAINLESS STEEL	2
③	FHC316-16-040	1/2"-13 X 1-1/4" LG. HEX HEAD CAP SCREW Material: 316 STAINLESS STEEL	2
④	2SR1N-B	2SR1N-B SADDLE RACK Material: Glass Filled Nylon	1
⑤	FRT-112	SETTING TOOL (Used to install Catalog No. FSRM-12 Drop-In Anchor)	AS REQ'D

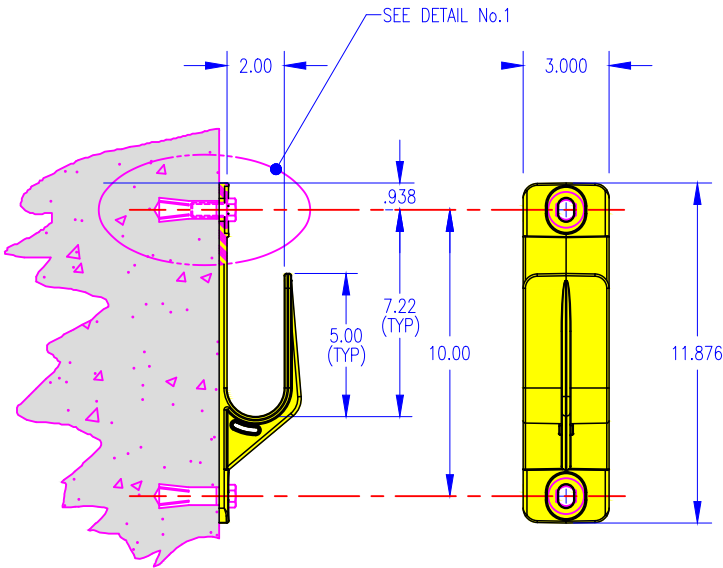

GENERAL INSTALLATION GUIDE LINES:

1. BE SURE THE SURFACE OF THE CONCRETE WALL IS FLAT AND SMOOTH.
2. ONE FASTENER SHOULD BE INSTALLED IN EACH OF THE SADDLE RACKS ELONGATED HOLES.
3. INSTALL EACH DROP-IN ANCHOR AS SHOWN ON THIS DRAWING AND AS DESCRIBED BELOW.
 - A. DRILL A 5/8" DIA HOLE 2-3/32" DEEP.
 - B. BLOW OUT HOLE.
 - C. DRIVE ANCHOR 3/32" TO 5/32" BELOW THE SURFACE OF THE CONCRETE SURFACE.
 - D. EXPAND ANCHOR WITH FRT112 SETTING TOOL. ANCHOIR IS PROPERLY SET WHEN SHOULDER OF SETTING TOOL IS FLUSH WITH THE TOP OF ANCHOR.

GENERAL INSTALLATION GUIDE LINES (CONTINUED):

4. INSTALL THE FLAT WASHER AND TIGHTEN THE CAP SCREW JUST ENOUGH TO ATTAIN A SNUG FIT. AVOID HIGH SCREW TORQUE WHICH INDUCES COMPRESSIVE STRESS.

NOTES:

- * SADDLE RACK IS ALSO AVAILABLE IN POLYCARBONATE. REMOVE "N" SUFFIX FROM CATALOG NUMBER.



SADDLE RACK NON-METALLIC CABLE RACK INSTALLATION DETAILS for 1/2" DROP-IN ANCHOR (FSRM-12), Featuring 2 Ea. FSRM-12's as used to Mount 1 Ea. 2SR1N-B Saddle Rack

SCALE: See At Above DESIGNED BY: Don McCoy DETAIL BY: S Wendland CHECKED BY: Don McCoy

DATE: 10-11-24 APPROVED BY: REVISION:

1st Designed For TYPICAL INSTALLATION OF CABLE RACKS

UNDERGROUND DEVICES, INC. 90-14460
NORTHBROOK, ILLINOIS 60062 - PHONE: (847) 205-9000
DRAWING NUMBER: 90-14460
PAGE 1 OF 1